

TOYOTA COROLLA WAGON MAINTENANCE SCHEDULE



Maintenance Operations:

A = Check and/or adjust as necessary
I = Inspect and correct or replace as necessary
R = Replace, change or lubricate

SERVICE INTERVAL: (Odometer reading or months, whichever comes first)	Odometer Reading										Months
	x 1000 km x 1000 miles	1 0.6	10 6	20 12	30 18	40 24	50 30	60 36	70 42	80 48	
BASIC ENGINE COMPONENTS											
1 Timing belt Diesel Engine		Replace every 100,000 km (60,000 miles)									-
2 Valve clearance Gasoline Engine <See note 1> Vehicles with a three-way catalytic converter Vehicles without a three-way catalytic converter Diesel engine <See note 2>				I		I		I		I	96 24 48
3 Drive belts			I		I		I		I		24
4 Engine oil Gasoline engine (API SH or SJ, or ILSAC) Diesel engine (API CF-4 or CF) <See note 3>			R	R	R	R	R	R	R	R	12
5 Engine oil filter			R	R	R		R	R	R	R	12
6 Cooling and heater system <See notes 4 and 5>						I				I	24
7 Engine coolant <See note 6>						R				R	24
8 Exhaust pipes and mountings				I		I		I		I	12
IGNITION SYSTEM											
9 Spark Plugs (Gasoline Engine) Vehicles with a three-way catalytic converter Vehicles without a three-way catalytic converter						R				R	48
10 Battery			I	R	I	R	I	R	I	R	I:12 / R:24 12
FUEL AND EMISSION CONTROL SYSTEMS											
11 Fuel filter Gasoline engine <See note 7> Vehicles with a three-way catalytic converter Vehicles without a three-way catalytic converter Diesel engine <See note 8>										R	96 48 24
12 Water sediment (Diesel Engine)			I	I	I	I	I	I	I	I	12
13 Air cleaner filter						R				R	I:24 / R:48
14 Idle speed (Diesel Engines)		A		A		A		A		A	24
15 Idle mixture (Gasoline Engine)		A		A		A		A		A	24
16 Diesel smoke (Diesel Engine)						I				I	48
17 Fuel tank cap, fuel lines and connections <See note 9>						I				I	24
18 Positive crankcase ventilation valve, ventilation hoses and connections (gasoline-powered vehicles without a three-way catalytic converter)				I		I		I		I	12
19 Charcoal canister (Gasoline Engine)						I				I	24
CHASSIS AND BODY											
20 Clutch pedal		I									-
21 Brake pedal and parking brake		I	I	I	I	I	I	I	I	I	6
22 Brake linings and drums				I		I		I		I	12
23 Brake pads and discs			I	I	I	I	I	I	I	I	6
24 Brake fluid		I	I	I	I	R	I	I	I	R	I:6 / R:24
25 Clutch fluid		I	I	I	I	I	I	I	I	I	6
26 Brake line pipes and hoses		I		I		I		I		I	12
27 Power steering fluid			I	I	I	I	I	I	I	I	6
28 Steering wheel, linkage and gear box oil				I		I		I		I	12
29 Drive shaft boots				I		I		I		I	24
30 Ball joints and dust covers				I		I		I		I	12
31 Manual transaxle oil						I				I	48
32 Automatic transaxle fluid						I				I	24
33 Front and rear suspensions				I		I		I		I	12
34 Tyres and inflation pressure		I	I	I	I	I	I	I	I	I	6
35 All lights, horns, wipers and washer		I	I	I	I	I	I	I	I	I	6
36 AIR CONDITIONING/COOLER REFRIGERANT		I		I		I		I		I	12

Notes

- * Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait
- 1 Inspect the tappet noise and engine vibration and adjust if necessary
- 2 Inspect the valve clearance using thickness gauge and adjust if necessary
- 3 You may also use API CE or CD
- 4 After 80,000 km (48,000 miles) or 48 months, inspect every 20,000 km (12,000 miles) or 12 months
- 5 Check that the radiator and condenser are not blocked with leaves, dirt, or insects, and clean the hose connection.
- 6 Use "TOYOTA Long Life Coolant" or equivalent
- 7 Including the filter in the fuel tank.
- 8 If the fuel used has a high level of impurities, such as fuel supplied from a drum, replace every 10,000 km (6,000 miles) or 12 months
- 9 After 80,000 km (48,000 miles) or 48 months, inspect every 20,000 km (12,000 miles) or 12 months

Source: Corolla Owners Manual, Publication No: OM12712E