

TOYOTA HIACE SERIES MAINTENANCE SCHEDULE



Maintenance Operations:

I = Inspect and correct or replace as necessary
 R = Replace, change or lubricate
 T = Tighten to specified torque

SERVICE INTERVAL: (Odometer reading or months, whichever comes first)	Odometer Reading								Months
	x 1000 km x 1000 miles	10 6	20 12	30 18	40 24	50 30	60 36	70 42	
BASIC ENGINE COMPONENTS									
1 Timing belt (Diesel Engine)				I					
2 Valve clearance (Diesel Engine)				I					I
Drive belts									
Gasoline engine		I		I		I		I	
3 Diesel engine									
1KD-FTV and 2KD-FTV engines		Inspect at first 100,000 km (60,000 miles) or 72 months, after 100,000 km (60,000 miles) inspect at every 20,000 km (12,000 miles) or 12 months							
5L-E engine		I		R		I			R
Engine oil									
Gasoline engine									
Except for China		R	R	R	R	R	R	R	R
For China		Replace every 5,000 km (3,000 km)							
4 Diesel engine <See note 1>									
Type A		R	R	R	R	R	R	R	R
Type B		Replace every 2,500 km (1,500 km)							
Others		Replace every 5,000 km (3,000 km)							
5 Engine oil filter <See note 1>									
Type B		Replace every 5000 km (3,000 miles)							
Others		R	R	R	R	R	R	R	R
6 Cooling and heater system <See note 2>				I					I
7 Engine coolant <See note 3>				R					R
8 Exhaust pipes and mountings		I		I		I		I	
9 DPR hoses for checking exhaust presurre (1KD-FTV engine that comply with EURO V)									
IGNITION SYSTEM									
Spark Plugs (gasoline engine)									
10 Vehicles with three-way catalytic converters		I	R	I	R	I	R	I	R
Vehicles without three-way catalytic converters		Replace every 100,000 km (60,000 km)							
11 Battery		I	I	I	I	I	I	I	I
FUEL AND EMISSION CONTROL SYSTEMS									
12 Fuel filter (Gasoline Engine) <See note 4>									R
13 Water sedimenter accumulator (Diesel engine)		I	I	I	I	I	I	I	I
Air cleaner filter <See note 5>									
2TR-FE engine (except for Hong Kong and China)		Inspect every 10,000 km (6,000 miles). Replace every 100,000 km (60,000 miles)							
14 1TR-FE engine and 2TR-FE engine (for Hong Kong and China)				R					R
5L-E engine, 2KD-FTV engine and 1KD-FTV engine (Except for Russia)		Inspect every 5,000 km (3,000 km). Replace every 30,000 km (18,000 km)							
1KD-FTV engine (for Russia)		I		R		I		R	
15 Air flow meter (1KD-FTV engine that comply with EURO IV, V)		Blow air to the sensor intermittently for about 30 seconds at every 60,000 km (36,000 miles)							
16 Diesel smoke (diesel engine)				I					I
17 Vacuum pump oil hose (5L-E engine)		I		I		I		I	
18 Fuel tank cap, fuel lines, connections and fuel vapor control valve <See note 2>				I					I
19 PCV system (Gasoline engine without three-way catalytic converters)		I		I		I		I	
20 Charcoal canister (Gasoline engine)				I					I
CHASSIS AND BODY									
21 Brake pedal and parking brake		I	I	I	I	I	I	I	I
22 Brake linings and drums (include parking brake linings and drums)		I	I	I	I	I	I	I	I
23 Brake pads and discs		I	I	I	I	I	I	I	I
24 Brake fluid		I	I	I	R	I	I	I	R
25 Clutch fluid		I	I	I	I	I	I	I	I
26 Brake pipes and hoses		I	I	I	I	I	I	I	I
27 Vacuum pump for brake booster (Diesel engine) <See note 6>		Inspect at every 200,000 km (120,000 miles)							
28 Power steering fluid		I	I	I	I	I	I	I	I
29 Steering wheel, linkage and gear box		I	I	I	I	I	I	I	I
30 Tightening bolts for propeller shaft			T		T		T		T
31 Suspension ball joints and dust cover		I	I	I	I	I	I	I	I
32 Automatic transmission fluid				I					I
33 Manual transmission oil				I					I
34 Differential gear oil			I		R		I		R
35 Front and rear suspensions		I	I	I	I	I	I	I	I
36 Tyres and inflation pressure		I	I	I	I	I	I	I	I
37 All lights, horns, wipers and washer		I	I	I	I	I	I	I	I
38 Air conditioning filter		I		I		I		I	
39 Refrigerant amount for air conditioner		I	I	I	I	I	I	I	I

Notes

- 1 Type A: 1KD-FTV engine for Singapore, Thailand, Hong Kong and Russia
Type B: 2KD-FTV engine for Jordan and Saudi Arabia
- 2 After 80,000 km (48,000 miles) or 48 months, inspect every 20,000km (12,000 miles) or 12 months.
- 3 First replace at 160,000 km (100,000 miles), then replace at every 80,000 km (50,000 miles).
- 4 Include the filter in fuel tank.
- 5 Include checking pre-air cleaner if it is equipped.
- 6 Replace the blade with new one and never reuse the blade.

Source: Hiace Owners Manual, Publication No: OM26826E