

TOYOTA HILUX (POST 2006) MAINTENANCE SCHEDULE



Maintenance Operations:

I = Inspect and correct or replace as necessary
 R = Replace, change or lubricate
 L = Lubricate

SERVICE INTERVAL: (Odometer reading or months, whichever comes first)	Odometer Reading								Months	
	10 x 1000 km 6 x 1000 miles	20	30	40	50	60	70	80		
BASIC ENGINE COMPONENTS										
1 Timing belt (Diesel Engine)	Replace every 150,000 km (90,000 miles)								-	
2 Valve clearance (except for 1TR-FE and 2TR-FE engines)									96	
1GR-FE engine									48	
1KD-FTV, 2KD-FTV and 5L-E engines				I					48	
Drive belts										
Gasoline engine (API SJ or SL, or ILSAC)									24	
Diesel engine										
1KD-FTV and 2KD-FTV engines	Inspect at first 100,000 km (60,000 miles) or 72 months, after 100,000 km (60,000 miles) inspect at every 20,000 km (12,000 miles) or 12 months.									
5L-E engine				R					R	I:24/R:48
Engine oil										
Gasoline engine	R	R	R	R	R	R	R	R	R	12
Diesel engine <See note 1>										
Type A	R	R	R	R	R	R	R	R	R	12
Type B	Replace every 2,500 km (1,500 miles)								3	
Others	Replace every 5,000 km (3,000 miles)								6	
Engine oil filter										
Gasoline engine	R	R	R	R	R	R	R	R	R	12
Diesel engine <See note 1>										
Type B	Replace every 5,000 km (3,000 miles)								6	
Others	R	R	R	R	R	R	R	R	R	12
6 Cooling and heater system <See note 2>										24
7 Engine coolant <<See note 3>>										-
8 Engine oil cooler hoses and connections (1GR-FE engine) <See note 2>										24
9 Exhaust pipes and mountings										12
IGNITION SYSTEM										
10 Spark plugs (Gasoline Engine)										
Vehicles without a three-way catalytic converter	I	R	I	R	I	R	I	R	I	I:12/R:24
Vehicles with a three-way catalytic converter				R					R	48
11 Battery	I	I	I	I	I	I	I	I	I	12
FUEL AND EMISSION CONTROL SYSTEMS										
12 Fuel filter (gasoline engine) <<See note 4>>										
Vehicles without a three-way catalytic converter				R					R	48
Vehicles with a three-way catalytic converter									R	96
13 Water sedimenter (Diesel Engine)	I	I	I	I	I	I	I	I	I	12
Air cleaner filter <See note 5>										
Gasoline engine										
Diesel engine				R					R	I:24/R:48
1KD-FTV and 2KD-FTV engines	Inspect every 5,000 km (3,000 miles)									
Except for South Africa and 5L-E engine	Replace every 30,000 km (18,000 miles)								I:6/R:36	
1KD-FTV and 2KD-FTV engines for South Africa	I	I	R	I	I	I	R	I	I	I:12/R:36
15 Air flow meter (diesel engines that comply with EURO IV or V) <<See note 6>>	Blow air to the sensor intermittently for about 30 seconds at every 60,000 km (36,000 miles)								72	
16 Diesel smoke (Diesel Engine)										48
17 Vacuum pump oil hose (5L-E engine)										12
18 Fuel tank cap, fuel lines, connections and fuel vapor control valve (if equipped) <<See note 2>>										24
19 Positive crankcase ventilation valve, ventilation hoses and connections (Gasoline Engine without three-way catalytic converters)										12
20 Charcoal canister (Gasoline Engine with three-way catalytic converters)										24
CHASSIS AND BODY										
21 Brake pedal and parking brake	I	I	I	I	I	I	I	I	I	6
22 Brake linings and drums (include parking brake linings and drums)										12
23 Brake pads and discs	I	I	I	I	I	I	I	I	I	6
24 Brake fluid	I	I	I	R	I	I	I	I	R	I:6/R:24
25 Clutch fluid	I	I	I	I	I	I	I	I	I	6
26 Brake pipes and hoses										12
27 Vacuum pump for brake booster (Diesel Engine) <<See note 7>>	Inspect at every 200,000 km (120,000 miles)								-	
28 Power steering fluid	I	I	I	I	I	I	I	I	I	6
29 Steering wheel, linkage and gear box										12
30 Propeller shafts grease (including tightening of bolts) <<See notes 8>>	L	L	L	L	L	L	L	L	L	6
31 Drive shaft boots (4WD models)	I	I	I	I	I	I	I	I	I	24
32 Suspension ball joints and dust cover	I	I	I	I	I	I	I	I	I	6
33 Automatic transmission fluid										24
34 Manual transmission oil										48
35 Transfer oil (4WD models)										48
36 Differential gear oil				R					R	I:12/R:36
37 Front and rear suspension										12
38 Tyres and inflation pressure	I	I	I	I	I	I	I	I	I	6
39 All lights, horns, wipers and washer	I	I	I	I	I	I	I	I	I	6
Air conditioning filter										
40 For Thailand, Indonesia, the Philippines and Malaysia			R				R			-
others		R		R					R	-
41 Refrigerant amount for air conditioner										12

- Notes**
- Type A: 1KD-FTV and 2KD-FTV engines for South Africa and Thailand
 - Type B: 2KD-FTV engine for Jordan and Saudi Arabia
 - After 80,000 km (48,000 miles) or 48 months, inspect every 20,000 m (12,000 miles) or 12 months.
 - First replace at 160,000 km (96,000 miles) then every 80,000 km (48,000 miles).
 - Including the filter in fuel tank.
 - Including checking pre-air cleaner. (1GR-FE engine only)
 - EURO IV and V are emission standards. If it is not clear that your vehicle meets relevant standards, contact your Toyota dealer.
 - Replace the blade with new one and never reuse the blade.
 - After submerged, be sure to apply grease within 24 hours regardless of the maintenance intervals.