

TOYOTA LAND CRUISER 200 SERIES MAINTENANCE SCHEDULE



Maintenance Operations:

- I = Inspect and correct or replace as necessary
- R = Replace, change or lubricate
- L = Lubricate
- C = Cleaning

SERVICE INTERVAL	Odometer reading or months, whichever comes first	Odometer Reading								Months	
		x 1000 KM	10	20	30	40	50	60	70		80
		x 1000 Miles	6	12	18	24	30	36	42		48
BASIC ENGINE COMPONENTS											
	Drive Belts										
1	Gasoline Engine		I		I		I		I	24	
	Diesel Engine	(12,000 miles) or 12 months									
	Engine Oil										
2	Gasoline Engine	R	R	R	R	R	R	R	R	12	
	Diesel Engine										
	For the Philippines & South Africa	R	R	R	R	R	R	R	R	12	
	Others	Replace every 5000 kms (3000 miles)									
3	Engine Oil Filter				R	R	R	R	R	12	
4	Cooling and Heater system <See note 1>				I				I	24	
5	Engine coolant <See note 2>				I				I	-	
6	Engine oil cooler hoses and connections (1GR-FE engine) <See note 1>				I				I	24	
7	Exhaust pipes and mountings		I		I		I		I	12	
IGNITION SYSTEM											
8	Spark Plugs (Gasoline Engine)	Replace every 100000 kms (60000 miles)									
9	Battery		I		I		I		I	12	
FUEL AND EMISSION CONTROL SYSTEMS											
10	Fuel filter Gasoline engine <See note 3>								R	96	
	Fuel Pump in tank (diesel engine with dual fuel tank) <See note 4>										
	Country Category A	Replace every 100,000 kms (60,000 miles)									
	Country Category B	Replace every 150,000 kms (90,000 miles)									
	Country Category C	Replace every 200,000 kms (120,000 miles)									
	Country Category D	Replace every 250,000 kms (150,000 miles)									
	Country Category E	Replace every 300,000 kms (180,000 miles)									
12	Water sedimenter (Diesel Engine)		I		I		I		I	12	
	Air cleaner filter <See note 5>										
13	Gasoline engine				R		I		R	I:24 /R:48	
	Diesel engine	Inspect at every 5000 kms (3000 miles), Replace at every 30000 kms (18000 miles)									
14	Diesel smoke (Diesel Engine)				I				I	48	
15	Fuel tank cap, fuel lines, connections and fuel vapour control valve <See note 1>				I				I	24	
16	Charcoal canister (Gasoline Engine)				I				I	24	
CHASSIS AND BODY											
17	Brake pedal and parking brake		I		I		I		I	6	
18	Brake linings and drums (Include parking brake linings and drums)		I		I		I		I	12	
19	Brake pads and discs		I		I		I		I	6	
20	Brake Fluid		I		I		R		I	I:6 /R:24	
21	Clutch Fluid		I		I		I		I	6	
22	Brake pipes and hoses		I		I		I		I	12	
23	Power steering fluid		I		I		I		I	6	
24	Steering wheel, linkage and gear box		I		I		I		I	6	
25	Propellor shafts grease <See note 6 and 7>	L	L	L	L	L	L	L	L	6	
26	Drive shaft boots		I		I		I		I	24	
27	Ball joints and dust cover		I		I		I		I	6	
28	Manual transmission oil									48	
29	Automatic transmission fluid									24	
30	Transfer oil									48	
31	Differential gear oil				R		I		R	I:12/R:48	
32	Front and rear suspension		I		I		I		I	6	
33	Tyres and inflation pressure		I		I		I		I	6	
34	All lights,horn,wipers and washer		I		I		I		I	6	
	Air conditioning filter										
35	Manual air conditioning system			R		R		R		R	
	Automatic air conditioning system	C	C	R	C	C	R	C	C	-	
36	Air Conditioning / Cooler Refrigerant		I		I		I		I	12	

Notes

- 1 After 80,000 kms (48,000 miles) or 48 months, inspect every 20,000 kms (12,000 miles) or 12 months
- 2 Change at 160,000 kms (100,000 miles) then every 80,000 kms (50,000 miles)
- 3 Including the filter in fuel tank
- 4 Refer to the service interval of the category that your country belongs to.
 - A. For Syria, Madagascar, Argentina, Cambodia, Myanmar (Burma), Cabo Verde, Burkina Faso, Niger, Tanzania, Mali, Solomon Islands and the Gambia only.
 - B. For Ghana, D.R. of Congo, El Salvador, Lebanon, New Caledonia, Fiji, Tunisia, Sudan, Pakistan and Mauritania only.
 - C. For Dominican Republic, Honduras, Aruba, Senegal, P.N.G., Mozambique, Nepal, Jamaica and Cook Islands only
 - D. For Benin, Guyana, Barbados, Antigua, Lesotho, Swaziland, Botswana, Guatemala, South Africa, Bhutan and Namibia only
 - E. Others
- 5 Including checking pre-air cleaner
- 6 Including tightening of bolts
- 7 After submerged, be sure to apply grease within 24 hrs regardless of the maintenance intervals

Source: Land Cruiser Owners Manual, Publication No: OM60L17E