

## TOYOTA COROLLA WAGON MAINTENANCE SCHEDULE

**Maintenance Operations:**
**A** = Check and/or adjust as necessary

**I** = Inspect and correct or replace as necessary

**R** = Replace, change or lubricate

SERVICE INTERVAL: (Odometer reading or months, whichever comes first)		Odometer Reading									Months	
		x 1000 km										
		1	10	20	30	40	50	60	70	80		
		x 1000 miles										
		0.6	6	12	18	24	30	36	42	48		
<b>BASIC ENGINE COMPONENTS</b>												
1	Timing belt Diesel Engine	Replace every 100,000 km (60,000 miles)									-	
2	Valve clearance Gasoline Engine <See note 1> Vehicles with a three-way catalytic converter Vehicles without a three-way catalytic converter Diesel engine <See note 2>			I		I		I		I	96 24 48	
3	Drive belts			I		I		I		I	24	
4	Engine oil Gasoline engine (API SH or SJ, or ILSAC) Diesel engine (API CF-4 or CF) <See note 3>		R	R	R	R	R	R	R	R	12	
5	Engine oil filter		Change every 5,000 km (3,000 miles) or 6 months									-
6	Cooling and heater system <See notes 4 and 5>					I				I	24	
7	Engine coolant <See note 6>					R				R	24	
8	Exhaust pipes and mountings			I		I		I		I	12	
<b>IGNITION SYSTEM</b>												
9	Spark Plugs (Gasoline Engine) Vehicles with a three-way catalytic converter Vehicles without a three-way catalytic converter					R				R	48	
10	Battery		I	I	I	I	I	I	I	I	I:12 / R:24 12	
<b>FUEL AND EMISSION CONTROL SYSTEMS</b>												
11	Fuel filter Gasoline engine <See note 7> Vehicles with a three-way catalytic converter Vehicles without a three-way catalytic converter Diesel engine <See note 8>					R				R	96 48 24	
12	Water sediment (Diesel Engine)		I	I	I	I	I	I	I	I	12	
13	Air cleaner filter			I		R		I		R	I:24 / R:48 24	
14	Idle speed (Diesel Engines)	A		A		A		A		A	24	
15	Idle mixture (Gasoline Engine)	A		A		A		A		A	24	
16	Diesel smoke (Diesel Engine)					I				I	48	
17	Fuel tank cap, fuel lines and connections <See note 9>					I				I	24	
18	Positive crankcase ventilation valve, ventilation hoses and connections (gasoline-powered vehicles without a three-way catalytic converter)			I		I		I		I	12	
19	Charcoal canister (Gasoline Engine)					I				I	24	
<b>CHASSIS AND BODY</b>												
20	Clutch pedal	I									-	
21	Brake pedal and parking brake	I	I	I	I	I	I	I	I	I	6	
22	Brake linings and drums			I		I		I		I	12	
23	Brake pads and discs		I	I	I	I	I	I	I	I	6	
24	Brake fluid	I	I	I	I	R	I	I	I	R	I:6 / R:24 6	
25	Clutch fluid	I	I	I	I	I	I	I	I	I	6	
26	Brake line pipes and hoses	I	I	I	I	I	I	I	I	I	12	
27	Power steering fluid		I	I	I	I	I	I	I	I	6	
28	Steering wheel, linkage and gear box oil			I		I		I		I	12	
29	Drive shaft boots			I		I		I		I	24	
30	Ball joints and dust covers			I		I		I		I	12	
31	Manual transaxle oil					I				I	48	
32	Automatic transaxle fluid					I				I	24	
33	Front and rear suspensions			I		I		I		I	12	
34	Tyres and inflation pressure	I	I	I	I	I	I	I	I	I	6	
35	All lights, horns, wipers and washer	I	I	I	I	I	I	I	I	I	6	
36	<b>AIR CONDITIONING/COOLER REFRIGERANT</b>	I	I	I	I	I	I	I	I	I	12	

**Notes**

\* Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

- Inspect the tappet noise and engine vibration and adjust if necessary
- Inspect the valve clearance using thickness gauge and adjust if necessary
- You may also use API CE or CD
- After 80,000 km (48,000 miles) or 48 months, inspect every 20,000 km (12,000 miles) or 12 months
- Check that the radiator and condenser are not blocked with leaves, dirt, or insects, and clean the hose connection.
- Use "TOYOTA Long Life Coolant" or equivalent
- Including the filter in the fuel tank.
- If the fuel used has a high level of impurities, such as fuel supplied from a drum, replace every 10,000 km (6,000 miles) or 12 months
- After 80,000 km (48,000 miles) or 48 months, inspect every 20,000 km (12,000 miles) or 12 months