

TOYOTA FORTUNER (2016-PRESENT) MAINTENANCE SCHEDULE

Maintenance Operations:

I = Inspect and correct or replace as necessary
R = Replace, change or lubricate
L = Lubricate
T = Tighten to specific torque

SERVICE INTERVAL: (Odometer reading or months, whichever comes first)	Odometer Reading									Months	
	x 1000 km x 1000 miles	10 6	20 12	30 18	40 24	50 30	60 36	70 42	80 48		
BASIC ENGINE COMPONENTS											
1 Timing belt (1KD-FTV, 2KD-FTV and 5L-E engines)		Replace every 150,000 km (90,000 miles)									-
2 Valve clearance (1KD-FTV, 2KD-FTV and 5L-E engines)				I						48	
3 Drive belts											
5L-E engine					R					R	I:24/R:48
Others		Inspect at first 100,000 km (60,000 miles) or 72 months, after 100,000 km (60,000 miles) inspect every 20,000 km (12,000 miles) or 12 months									
4 Engine oil <See note 1>											
Type A		R	R	R	R	R	R	R	R	R	12
Type B		Replace every 2,500 km (1,500 miles)									3
Others		Replace every 5,000 km (3,000 miles)									6
5 Engine oil filter <See note 1>											
Type B		Replace every 5,000 km (3,000 miles)									6
Others		R	R	R	R	R	R	R	R	R	12
6 Cooling and heater system <See note 2>											24
7 Engine coolant (including intercooler coolant) <See note 3>											-
8 Exhaust pipes and mountings			I								12
9 DPF hoses for checking exhaust pressure (for 1GD-FTV and 2GD-FTV engines)											R:36
IGNITION SYSTEM											
10 Battery		I	I	I	I	I	I	I	I	I	12
FUEL AND EMISSION CONTROL SYSTEMS											
11 Water sediment accumulator		I	I	I	I	I	I	I	I	I	12
Air cleaner filter (including checking pre-air cleaner, if equipped)											
12 For South Africa				R				R			I:6/R:36
Except for South Africa		Inspect every 5,000 km (3,000 miles). Replace every 30,000 km (18,000 miles)									I:12/R:36
13 Diesel smoke											48
14 Vacuum pump oil hose (5L-E engine)											12
15 Fuel tank cap, fuel lines and connections <See note 2>			I								24
CHASSIS AND BODY											
16 Brake pedal and parking brake		I	I	I	I	I	I	I	I	I	6
17 Brake linings and drums (include parking brake linings and drums)											12
18 Brake pads and discs											6
19 Brake fluid					R					R	I:6/R:24
20 Clutch fluid											6
21 Brake pipes and hoses											12
22 Vacuum pump for brake booster <See note 4>		Inspect every 200,000 km (120,000 miles)									-
23 Power steering fluid		I	I	I	I	I	I	I	I	I	6
24 Steering wheel, linkage and steering gear box											12
25 Propeller shaft grease <See note 5>		L	L	L	L	L	L	L	L	L	6
26 Propeller shaft bolts		T	T	T	T	T	T	T	T	T	6
27 Drive shaft boots (4WD models)											24
28 Suspension ball joints and dust cover											6
29 Automatic transmission fluid											24
30 Manual transmission oil											48
31 Automatic transmission fluid cooler hoses and connections (6-speed automatic transmission)											24
32 Transfer oil (4WD models)											48
33 Front differential oil (4WD models)					R					R	I:12/R:48
34 Rear differential oil					R					R	I:12/R:48
35 Front and rear suspension											12
36 Tires and inflation pressure											6
37 Lights, horn, wipers and washers											6
38 Air conditioning filter			R		R		R			R	-
39 Refrigerant amount for air conditioner											12

Notes

- Type A:
1GD-FTV and 2GD-FTV engines for South Africa and Thailand
- Type B:
2KD-FTV engine for Jordan and 2GD-FTV engine for Saudi Arabia
- After 80,000 km (48,000 miles) or 48 months inspection, inspect every 20,000 km (12,000 miles) or 12 months.
- First replace at 160,000 km (96,000 miles) then replace every 80,000 km (48,000 miles).
- Replace the blade with new one and never reuse the blade.
- Lubricate within 24 hours after submerging.