

TOYOTA FORTUNER (GD SERIES) MAINTENANCE SCHEDULE

Maintenance Operations:

I = Inspect and correct or replace as necessary
R = Replace, change or lubricate
L = Lubricate
T = Tighten to specific torque

SERVICE INTERVAL: (Odometer reading or months, whichever comes first)	Odometer Reading								Months
	x 1000 km x 1000 miles								
	10 6	20 12	30 18	40 24	50 30	60 36	70 42	80 48	
BASIC ENGINE COMPONENTS									
1 Valve clearance (1GR-FE engine)		I		I		I		I	96
2 Drive belts		I		I		I		I	24
3 Engine oil	R	R	R	R	R	R	R	R	12
4 Engine oil filter	R	R	R	R	R	R	R	R	12
5 Cooling and heater system <See note 1.>				I				I	24
6 Engine coolant <See note 2.>				I				I	-
7 Engine oil cooler hoses and connections <See note 1.>				I				I	24
8 Exhaust pipes and mountings		I		I		I		I	12
IGNITION SYSTEM									
9 Spark plugs									
1GR-FE engine				R				R	48
2TR-FE engine	Replace every 100000 km (60000 miles)								-
10 Battery	I	I	I	I	I	I	I	I	12
FUEL AND EMISSION CONTROL SYSTEMS									
11 Fuel filter <See note 3.>								R	96
12 Air cleaner filter <See note 4.>		I		R		I		R	I:24/R:48
13 Fuel tank cap, fuel lines, connections and fuel vapor control valve <See note 1.>				I				I	24
14 Charcoal canister				I				I	24
CHASSIS AND BODY									
15 Brake pedal and parking brake	I	I	I	I	I	I	I	I	6
16 Brake linings and drums (include parking brake linings and drums)	I	I	I	I	I	I	I	I	12
17 Brake pads and discs	I	I	I	I	I	I	I	I	6
18 Brake fluid	I	I	I	R	I	I	I	R	I:6/R:24
19 Clutch fluid	I	I	I	I	I	I	I	I	6
20 Brake pipes and hoses	I	I	I	I	I	I	I	I	12
21 Power steering fluid	I	I	I	I	I	I	I	I	6
22 Steering wheel, linkage and steering gear box	I	I	I	I	I	I	I	I	12
23 Propeller shaft grease <See note 5 and 6.>	L	L	L	L	L	L	L	L	6
24 Propeller shaft bolts	T	T	T	T	T	T	T	T	6
25 Drive shaft boots (4WD models)	I	I	I	I	I	I	I	I	24
26 Suspension ball joints and dust cover	I	I	I	I	I	I	I	I	6
27 Automatic transmission fluid								I	24
28 Automatic transmission fluid cooler hoses and connections								I	24
29 Manual transmission oil								I	48
30 Transfer oil (4WD models)								I	48
31 Front differential oil (4WD models)		I		R		I		R	I:12/R:48
32 Rear differential oil		I		R		I		R	I:12/R:48
33 Front and rear suspension		I		I		I		I	12
34 Tires and inflation pressure	I	I	I	I	I	I	I	I	6
35 Lights, horn, wipers and washers	I	I	I	I	I	I	I	I	6
36 Air conditioning filter		R		R		R		R	-
37 Refrigerant amount for air conditioner		I		I		I		I	12

Notes

- After 80,000 km (48,000 miles) or 48 months inspection, inspect every 20,000 km (12,000 miles) or 12 months.
- First replace at 160,000 km (96,000 miles) then replace every 80,000 km (48,000 miles).
- Including the filler in fuel tank.
- Including checking pre-air cleaner if it is equipped.
- Lubricate within 24 hours after submerging.
- With grease fitting only.

Source: Toyota Fortuner Owners Manual, Part No: 01999-0K340