

TOYOTA FORTUNER (PRE-2016) MAINTENANCE SCHEDULE

Maintenance Operations:

I = Inspect and correct or replace as necessary
R = Replace, change or lubricate
L = Lubricate
T = Tighten to specific torque

SERVICE INTERVAL: (Odometer reading or months, whichever comes first)	Odometer Reading									Months	
	x 1000 km x 1000 miles	10 6	20 12	30 18	40 24	50 30	60 36	70 42	80 48		
BASIC ENGINE COMPONENTS											
1	Timing belt	Replace every 150,000 km (90,000 miles)									-
2	Valve clearance				I				I	48	
3	Drive belts	Inspect at first 1000,000 km (60,000 miles) or 72 months, after 100,000 km (60,000 miles) inspect every 20,000 km (12,000 miles) or 12 months									-
	1KD-FTV and 2KD-FTV engines		I		R		I		R	I:24/R:48	
	5L-E engine		I		R		I		R	I:24/R:48	
	Engine oil <See note 1>										
4	Type A	R	R	R	R	R	R	R	R	12	
	Type B	Replace every 2,500 km (1,500 miles)									3
	Others	Replace every 5,000 km (3,000 miles)									6
5	Engine oil filter <See note 1>	R	R	R	R	R	R	R	R	12	
	Type B	Replace every 5,000 km (3,000 miles)									6
	Others	R	R	R	R	R	R	R	R	12	
6	Cooling and heater system <See note 2>				I				I	24	
7	Engine coolant <See note 3>				I				I	-	
8	Exhaust pipes and mountings		I		I		I		I	12	
IGNITION SYSTEM											
9	Battery	I	I	I	I	I	I	I	I	12	
FUEL AND EMISSION CONTROL SYSTEMS											
10	Water sediment accumulator	I	I	I	I	I	I	I	I	12	
	Air cleaner filter										
11	1KD-FTV and 2KD-FTV engines except for South Africa, and 5L-E engine	Inspect every 5,000 km (3,000 miles), Replace every 30,000 km (18,000 miles)									I:6/R:36
	1KD-FTV and 2KD-FTV engines for South Africa			R						I:12/R:36	
12	Air flow meter (diesel engines that comply with EURO IV) <See note 4>	Blow air to the sensor intermittently for about 30 seconds every 60,000 km (36,000 miles)									72
13	Diesel smoke				I				I	48	
14	Vacuum pump oil hose (5L-E engine)		I						I	12	
15	Fuel tank cap, fuel lines and connections <See note 2>				I				I	24	
CHASSIS AND BODY											
16	Brake pedal and parking brake	I	I	I	I	I	I	I	I	6	
17	Brake linings and drums (include parking brake linings and drums)									12	
18	Brake pads and discs									6	
19	Brake fluid				R				R	I:6/R:24	
20	Clutch fluid									6	
21	Brake pipes and hoses									12	
22	Vacuum pump for brake booster <See note 5>	Inspect every 200,000 km (120,000 miles)									-
23	Power steering fluid	I	I	I	I	I	I	I	I	6	
24	Steering wheel, linkage and steering gear box									12	
25	Propeller shaft grease <See note 6>	L	L	L	L	L	L	L	L	6	
26	Propeller shaft bolts	T	T	T	T	T	T	T	T	6	
27	Drive shaft boots (4WD models)									24	
28	Suspension ball joints and dust cover	I	I	I	I	I	I	I	I	6	
29	Automatic transmission fluid									24	
30	Manual transmission oil									48	
31	Transfer oil (4WD models)									48	
32	Front differential oil (4WD models)		I		R		I		R	I:12/R:48	
33	Rear differential oil				R				R	I:12/R:48	
34	Front and rear suspension									12	
35	Tyres and inflation pressure									6	
36	Lights, horns, wipers and washers	I	I	I	I	I	I	I	I	6	
	Air conditioning filter										
37	For Thailand, Indonesia, the Philippines, Malaysia and Vietnam			R			R			-	
	Others		R		R		R		R	-	
38	Refrigerant amount for air conditioner		I		I		I		I	12	

Notes

- Type A:
1KD-FTV and 2KD-FTV engines for South Africa and Thailand
Type B:
2KD-FTV engine for Jordan and Saudi Arabia
- After 80,000 km (48,000 miles) or 48 months inspection, inspect every 20,000 km (12,000 miles) or 12 months.
- First replace at 160,000 km (96,000 miles) then every 80,000 km (48,000 miles).
- EURO IV is an emission standard. If it is not clear that your vehicle meets relevant standards, contact your Toyota dealer.
- Replace the blade with new one and never reuse the blade.
- Lubricate within 24 hours after submerging.

Source: Toyota Fortuner Owners Manual, Part No: 01999-0K133