

## TOYOTA HILUX (2006-2016) MAINTENANCE SCHEDULE

**Maintenance Operations:**

I = Inspect and correct or replace as necessary  
 R = Replace, change or lubricate  
 L = Lubricate

SERVICE INTERVAL: (Odometer reading or months, whichever comes first)	Odometer Reading								Months
	x 1000 km								
	10	20	30	40	50	60	70	80	
x 1000 miles	6	12	18	24	30	36	42	48	
<b>BASIC ENGINE COMPONENTS</b>									
1 Timing belt (Diesel Engine)	Replace every 150,000 km (90,000 miles)								-
Valve clearance (except for 1TR-FE and 2TR-FE engines)									
2 1GR-FE engine									96
1KD-FTV, 2KD-FTV and 5L-E engines									48
Drive belts									
Gasoline engine (API SJ or SL, or ILSAC)									24
3 Diesel engine									
1KD-FTV and 2KD-FTV engines	Inspect at first 100,000 km (60,000 miles) or 72 months, after 100,000 km (60,000 miles) inspect at every 20,000 km (12,000 miles) or 12 months.								
5L-E engine									I:24/R:48
Engine oil									
Gasoline engine	R	R	R	R	R	R	R	R	12
4 Diesel engine <See note 1>									
Type A	R	R	R	R	R	R	R	R	12
Type B	Replace every 2,500 km (1,500 miles)								3
Others	Replace every 5,000 km (3,000 miles)								6
Engine oil filter									
Gasoline engine	R	R	R	R	R	R	R	R	12
5 Diesel engine <See note 1>									
Type B	Replace every 5,000 km (3,000 miles)								6
Others	R	R	R	R	R	R	R	R	12
6 Cooling and heater system <See note 2>									
7 Engine coolant <See note 3>									24
8 Engine oil cooler hoses and connections (1GR-FE engine) <See note 2>									24
9 Exhaust pipes and mountings									12
<b>IGNITION SYSTEM</b>									
Spark plugs (Gasoline Engine)									
10 Vehicles without a three-way catalytic converter		R		R			R		I:12/R:24
Vehicles with a three-way catalytic converter				R				R	48
11 Battery									12
<b>FUEL AND EMISSION CONTROL SYSTEMS</b>									
Fuel filter (gasoline engine) <See note 4>									
12 Vehicles without a three-way catalytic converter					R				48
Vehicles with a three-way catalytic converter									96
13 Water sedimenter (Diesel Engine)									12
Air cleaner filter <See note 5>									
Gasoline engine									I:24/R:48
14 Diesel engine									
1KD-FTV and 2KD-FTV engines	Inspect every 5,000 km (3,000 miles)								
Except for South Africa and 5L-E engine	Replace every 30,000 km (18,000 miles)								I:6/R:36
1KD-FTV and 2KD-FTV engines for South Africa			R				R		I:12/R:36
15 Air flow meter (diesel engines that comply with EURO IV or V) <See note 6>	Blow air to the sensor intermittently for about 30 seconds at every 60,000 km (36,000 miles)								72
16 Diesel smoke (Diesel Engine)									48
17 Vacuum pump oil hose (5L-E engine)									12
18 Fuel tank cap, fuel lines, connections and fuel vapor control valve (if equipped) <See note 2>									24
19 Positive crankcase ventilation valve, ventilation hoses and connections (Gasoline Engine without three-way catalytic converters)									12
20 Charcoal canister (Gasoline Engine with three-way catalytic converters)									24
<b>CHASSIS AND BODY</b>									
21 Brake pedal and parking brake									6
22 Brake linings and drums (include parking brake linings and drums)									12
23 Brake pads and discs									6
24 Brake fluid					R				I:6/R:24
25 Clutch fluid									6
26 Brake pipes and hoses									12
27 Vacuum pump for brake booster (Diesel Engine) <See note 7>	Inspect at every 200,000 km (120,000 miles)								-
28 Power steering fluid									6
29 Steering wheel, linkage and gear box									12
30 Propeller shafts grease (including tightening of bolts) <See notes 8>	L	L	L	L	L	L	L	L	6
31 Drive shaft boots (4WD models)									24
32 Suspension ball joints and dust cover									6
33 Automatic transmission fluid									24
34 Manual transmission oil									48
35 Transfer oil (4WD models)									48
36 Differential gear oil									I:12/R:36
37 Front and rear suspension									12
38 Tyres and inflation pressure									6
39 All lights, horns, wipers and washer									6
Air conditioning filter									6
40 For Thailand, Indonesia, the Philippines and Malaysia									-
others		R		R			R		-
41 Refrigerant amount for air conditioner									12

- Notes**
- Type A: 1KD-FTV and 2KD-FTV engines for South Africa and Thailand  
 Type B: 2KD-FTV engine for Jordan and Saudi Arabia
  - After 80,000 km (48,000 miles) or 48 months, inspect every 20,000 km (12,000 miles) or 12 months.
  - First replace at 160,000 km (96,000 miles) then every 80,000 km (48,000 miles).
  - Including the filter in fuel tank.
  - Including checking pre-air cleaner. (1GR-FE engine only)
  - EURO IV and V are emission standards. If it is not clear that your vehicle meets relevant standards, contact your Toyota dealer.
  - Replace the blade with new one and never reuse the blade.
  - After submerged, be sure to apply grease within 24 hours regardless of the maintenance intervals.