

## TOYOTA LAND CRUISER 200 SERIES MAINTENANCE SCHEDULE

**Maintenance Operations:**

I = Inspect and correct or replace as necessary  
R = Replace, change or lubricate  
L = Lubricate  
C = Cleaning

SERVICE INTERVAL	Odometer reading or months, whichever comes first	Odometer Reading								Months
		x 1000 KM x 1000 Miles	10 6	20 12	30 18	40 24	50 30	60 36	70 42	
<b>BASIC ENGINE COMPONENTS</b>										
1	Drive Belts									
	Gasoline Engine		I		I		I		I	24
	Diesel Engine	Inspect at first 100,000 km (60,000 miles) or 72 months, after 100,000 km (60,000 miles) inspect every 20,000								
2	Engine Oil									
	Gasoline Engine	R	R	R	R	R	R	R	R	12
	Diesel Engine									
	For the Philippines & South Africa	R	R	R	R	R	R	R	R	12
	Others	Replace every 5000 kms (3000 miles)								
3	Engine Oil Filter	R	R	R	R	R	R	R	R	12
4	Cooling and Heater system <See note 1>				I				I	24
5	Engine coolant <See note 2>				I				I	24
6	Engine oil cooler hoses and connections (1GR-FE engine) <See note 1>				I				I	24
7	Exhaust pipes and mountings		I		I			I	I	12
<b>IGNITION SYSTEM</b>										
8	Spark Plugs (Gasoline Engine)	Replace every 100000 kms (60000 miles)								
9	Battery	I	I	I	I	I	I	I	I	12
<b>FUEL AND EMISSION CONTROL SYSTEMS</b>										
10	Fuel filter Gasoline engine <See note 3>								R	96
	Fuel Pump in tank (diesel engine with dual fuel tank) <See note 4>									
11	Country Category A	Replace every 100,000 kms (60,000 miles)								
	Country Category B	Replace every 150,000 kms (90,000 miles)								
	Country Category C	Replace every 200,000 kms (120,000 miles)								
	Country Category D	Replace every 250,000 kms (150,000 miles)								
	Country Category E	Replace every 300,000 kms (180,000 miles)								
12	Water sedimenter (Diesel Engine)	I	I	I	I	I	I	I	I	12
13	Air cleaner filter <See note 5>									
	Gasoline engine		I		R		I		R	I:24 /R:48
	Diesel engine	Inspect at every 5000 kms (3000 miles), Replace at every 30000 kms (18000 miles)								
14	Diesel smoke (Diesel Engine)				I				I	48
15	Fuel tank cap, fuel lines, connections and fuel vapour control valve <See note 1>				I				I	24
16	Charcoal canister (Gasoline Engine)				I				I	24
<b>CHASSIS AND BODY</b>										
17	Brake pedal and parking brake	I	I	I	I	I	I	I	I	6
18	Brake linings and drums (Include parking brake linings and drums)	I	I	I	I	I	I	I	I	12
19	Brake pads and discs	I	I	I	I	I	I	I	I	6
20	Brake Fluid	I	I	I	R	I	I	I	R	I:6 /R:24
21	Clutch Fluid	I	I	I	I	I	I	I	I	6
22	Brake pipes and hoses	I	I	I	I	I	I	I	I	12
23	Power steering fluid	I	I	I	I	I	I	I	I	6
24	Steering wheel, linkage and gear box	I	I	I	I	I	I	I	I	6
25	Propellor shafts grease <See note 6 and 7>	L	L	L	L	L	L	L	L	6
26	Drive shaft boots	I	I	I	I	I	I	I	I	24
27	Ball joints and dust cover	I	I	I	I	I	I	I	I	6
28	Manual transmission oil				I				I	48
29	Automatic transmission fluid				I				I	24
30	Transfer oil				I				I	48
31	Differential gear oil		I		R		I		R	I:12/R:48
32	Front and rear suspension	I	I	I	I	I	I	I	I	6
33	Tyres and inflation pressure	I	I	I	I	I	I	I	I	6
34	All lights,horn,wipers and washer	I	I	I	I	I	I	I	I	6
	Air conditioning filter									
35	Manual air conditioning system		R		R		R		R	-
	Automatic air conditioning system	C	C	R	C	C	R	C	C	-
36	Air Conditioning / Cooler Refrigerant		I		I		I		I	12

**Notes**

- After 80,000 kms (48,000 miles) or 48 months, inspect every 20,000 kms (12,000 miles) or 12 months
- Change at 160,000 kms (100,000 miles) then every 80,000 kms (50,000 miles)
- Including the filter in fuel tank
- Refer to the service interval of the category that your country belongs to.
  - For Syria, Madagascar, Argentina, Cambodia, Myanmar (Burma), Cabo Verde, Burkina Faso, Niger, Tanzania, Mali, Solomon Islands and the Gambia only.
  - For Ghana, D R of Congo, El Salvador, Lebanon, New Caledonia, Fiji, Tunisia, Sudan, Pakistan and Mauritania only.
  - For Dominican Republic, Honduras, Aruba, Senegal, P.N.G., Mozambique, Nepal, Jamaica and Cook Islands only
  - For Benin, Guyana, Barbados, Antigua, Lesotho, Swaziland, Botswana, Guatemala, South Africa, Bhutan and Namibia only
  - Others
- Including checking pre-air cleaner
- Including tightening of bolts
- After submerged, be sure to apply grease within 24 hrs regardless of the maintenance intervals

Source: Land Cruiser Owners Manual, Publication No: OM60L17E