

NEW GENERATION TOYOTA FORTUNER (2016) MAINTENANCE SCHEDULE



Maintenance Operations:

I = Inspect and correct or replace as necessary
 R = Replace, change or lubricate
 L = Lubricate
 T = Tighten to specific torque

SERVICE INTERVAL: (Odometer reading or months, whichever comes first)	Odometer Reading									Months	
	x 1000 km	10	20	30	40	50	60	70	80		
x 1000 miles	6	12	18	24	30	36	42	48			
BASIC ENGINE COMPONENTS											
1 Timing belt (1KD-FTV, 2KD-FTV and 5L-E engines)	Replace every 150,000 km (90,000 miles)									-	
2 Valve clearance (1KD-FTV, 2KD-FTV and 5L-E engines)	I									48	
3 Drive belts	I										
5L-E engine	I										
Others	I										
4 Engine oil <See note 1>	I										
Type A	R	R	R	R	R	R	R	R	R	12	
Type B	Replace every 2,500 km (1,500 miles)									3	
Others	Replace every 5,000 km (3,000 miles)									6	
5 Engine oil filter <See note 1>	I										
Type B	Replace every 5,000 km (3,000 miles)									6	
Others	R	R	R	R	R	R	R	R	R	12	
6 Cooling and heater system <See note 2>	I									24	
7 Engine coolant (including intercooler coolant) <See note 3>	I										
8 Exhaust pipes and mountings	I										
9 DPF hoses for checking exhaust pressure (for 1GD-FTV and 2GD-FTV engines)	I									12	
IGNITION SYSTEM	-									R:36	
10 Battery	I									12	
FUEL AND EMISSION CONTROL SYSTEMS											
11 Water sediment accumulator	I									12	
Air cleaner filter (including checking pre-air cleaner, if equipped)	I										
For South Africa	I										
Except for South Africa	R									I:8/R:36	
13 Diesel smoke	Inspect every 5,000 km (3,000 miles), Replace every 30,000 km (18,000 miles)									I:12/R:36	
14 Vacuum pump oil hose (5L-E engine)	I									48	
15 Fuel tank cap, fuel lines and connections <See note 2>	I									12	
CHASSIS AND BODY											
16 Brake pedal and parking brake	I									6	
17 Brake linings and drums (include parking brake linings and drums)	I									12	
18 Brake pads and discs	I									6	
19 Brake fluid	I										
20 Clutch fluid	I									6	
21 Brake pipes and hoses	I									12	
22 Vacuum pump for brake booster <See note 4>	Inspect every 200,000 km (120,000 miles)									-	
23 Power steering fluid	I									6	
24 Steering wheel, linkage and steering gear box	I									12	
25 Propeller shaft grease <See note 5>	L	L	L	L	L	L	L	L	L	6	
26 Propeller shaft bolts	T	T	T	T	T	T	T	T	T	6	
27 Drive shaft boots (4WD models)	I									24	
28 Suspension ball joints and dust cover	I									6	
29 Automatic transmission fluid	I									24	
30 Manual transmission oil	I									48	
31 Automatic transmission fluid cooler hoses and connections (6-speed automatic transmission)	I									24	
32 Transfer oil (4WD models)	I									48	
33 Front differential oil (4WD models)	I									R	I:12/R:48
34 Rear differential oil	I									R	I:12/R:48
35 Front and rear suspension	I									12	
36 Tires and inflation pressure	I									6	
37 Lights, horn, wipers and washers	I									6	
38 Air conditioning filter	R										
39 Refrigerant amount for air conditioner	I									12	

Notes

- Type A:
1GD-FTV and 2GD-FTV engines for South Africa and Thailand
- Type B:
2KD-FTV engine for Jordan and 2GD-FTV engine for Saudi Arabia
- After 80,000 km (48,000 miles) or 48 months inspection, inspect every 20,000 km (12,000 miles) or 12 months.
- First replace at 160,000 km (96,000 miles) then replace every 80,000 km (48,000 miles).
- Replace the blade with new one and never reuse the blade.
- Lubricate within 24 hours after submerging.