

## TOYOTA FORTUNER MAINTENANCE SCHEDULE



### Maintenance Operations:

- I = Inspect and correct or replace as necessary
- R = Replace, change or lubricate
- L = Lubricate
- T = Tighten to specific torque

SERVICE INTERVAL: (Odometer reading or months, whichever comes first)	Odometer Reading									Months	
	x 1000 km x 1000 miles	10 6	20 12	30 18	40 24	50 30	60 36	70 42	80 48		
<b>BASIC ENGINE COMPONENTS</b>											
1	Timing belt	Replace every 150,000 km (90,000 miles)									-
2	Valve clearance				I					I	48
	Drive belts										-
3	1KD-FTV and 2KD-FTV engines	Inspect at first 1000,000 km (60,000 miles) or 72 months, after 100,000 km (60,000 miles) inspect every 20,000 km (12,000 miles) or 12 months									-
	5L-E engine		I		R		I			R	I:24/R:48
	Engine oil <See note 1>										-
4	Type A	R	R	R	R	R	R	R	R	R	12
	Type B	Replace every 2,500 km (1,500 miles)									3
	Others	Replace every 5,000 km (3,000 miles)									6
	Engine oil filter <See note 1>	R	R	R	R	R	R	R	R	R	12
5	Type B	Replace every 5,000 km (3,000 miles)									6
	Others	R	R	R	R	R	R	R	R	R	12
6	Cooling and heater system <See note 2>				I					I	24
7	Engine coolant <See note 3>				I					I	-
8	Exhaust pipes and mountings		I		I				I		12
<b>IGNITION SYSTEM</b>											
9	Battery	I	I	I	I	I	I	I	I	I	12
<b>FUEL AND EMISSION CONTROL SYSTEMS</b>											
10	Water sediment accumulator	I	I	I	I	I	I	I	I	I	12
	Air cleaner filter										-
11	1KD-FTV and 2KD-FTV engines except for South Africa, and 5L-E engine 1KD-FTV and 2KD-FTV engines for South Africa	Inspect every 5,000 km (3,000 miles), Replace every 30,000 km (18,000 miles)									I:6/R:36
12	Air flow meter (diesel engines that comply with EURO IV) <See note 4>	I	I	I	I	I	I	I	I	I	I:12/R:36
	Diesel smoke	Blow air to the sensor intermittently for about 30 seconds every 60,000 km (36,000 miles)									72
13	Vacuum pump oil hose (5L-E engine)		I		I		I		I		12
14	Fuel tank cap, fuel lines and connections <See note 2>		I		I		I		I		24
<b>CHASSIS AND BODY</b>											
16	Brake pedal and parking brake	I	I	I	I	I	I	I	I	I	6
17	Brake linings and drums (include parking brake linings and drums)										12
18	Brake pads and discs	I	I	I	I	I	I	I	I	I	6
19	Brake fluid				R					R	I:6/R:24
20	Clutch fluid	I	I	I	I	I	I	I	I	I	6
21	Brake pipes and hoses				I					I	12
22	Vacuum pump for brake booster <See note 5>	Inspect every 200,000 km (120,000 miles)									-
23	Power steering fluid	I	I	I	I	I	I	I	I	I	6
24	Steering wheel, linkage and steering gear box										12
25	Propeller shaft grease <See note 6>	L	L	L	L	L	L	L	L	L	6
26	Propeller shaft bolts	T	T	T	T	T	T	T	T	T	6
27	Drive shaft boots (4WD models)				I					I	24
28	Suspension ball joints and dust cover	I	I	I	I	I	I	I	I	I	6
29	Automatic transmission fluid										24
30	Manual transmission oil										48
31	Transfer oil (4WD models)										48
32	Front differential oil (4WD models)		I		R		I		R		I:12/R:48
33	Rear differential oil		I		R		I		R		I:12/R:48
34	Front and rear suspension				I					I	12
35	Tyres and inflation pressure	I	I	I	I	I	I	I	I	I	6
36	Lights, horns, wipers and washers	I	I	I	I	I	I	I	I	I	6
<b>Air conditioning filter</b>											
37	For Thailand, Indonesia, the Philippines, Malaysia and Vietnam			R				R			-
	Others		R		R		R		R		-
38	Refrigerant amount for air conditioner		I		I		I		I		12

### Notes

- 1 Type A:  
1KD-FTV and 2KD-FTV engines for South Africa and Thailand
- Type B:  
2KD-FTV engine for Jordan and Saudi Arabia
- 2 After 80,000 km (48,000 miles) or 48 months inspection, inspect every 20,000 km (12,000 miles) or 12 months.
- 3 First replace at 160,000 km (96,000 miles) then every 80,000 km (48,000 miles).
- 4 EURO IV is an emission standard. If it is not clear that your vehicle meets relevant standards, contact your Toyota dealer.
- 5 Replace the blade with new one and never reuse the blade.
- 6 Lubricate within 24 hours after submerging.

Source: Toyota Fortuner Owners Manual, Part No: 01999-0K133