




TOYOTA

GIBRALTAR STOCKHOLDINGS LTD

Agents for
Toyota Motor Europe NV/SA

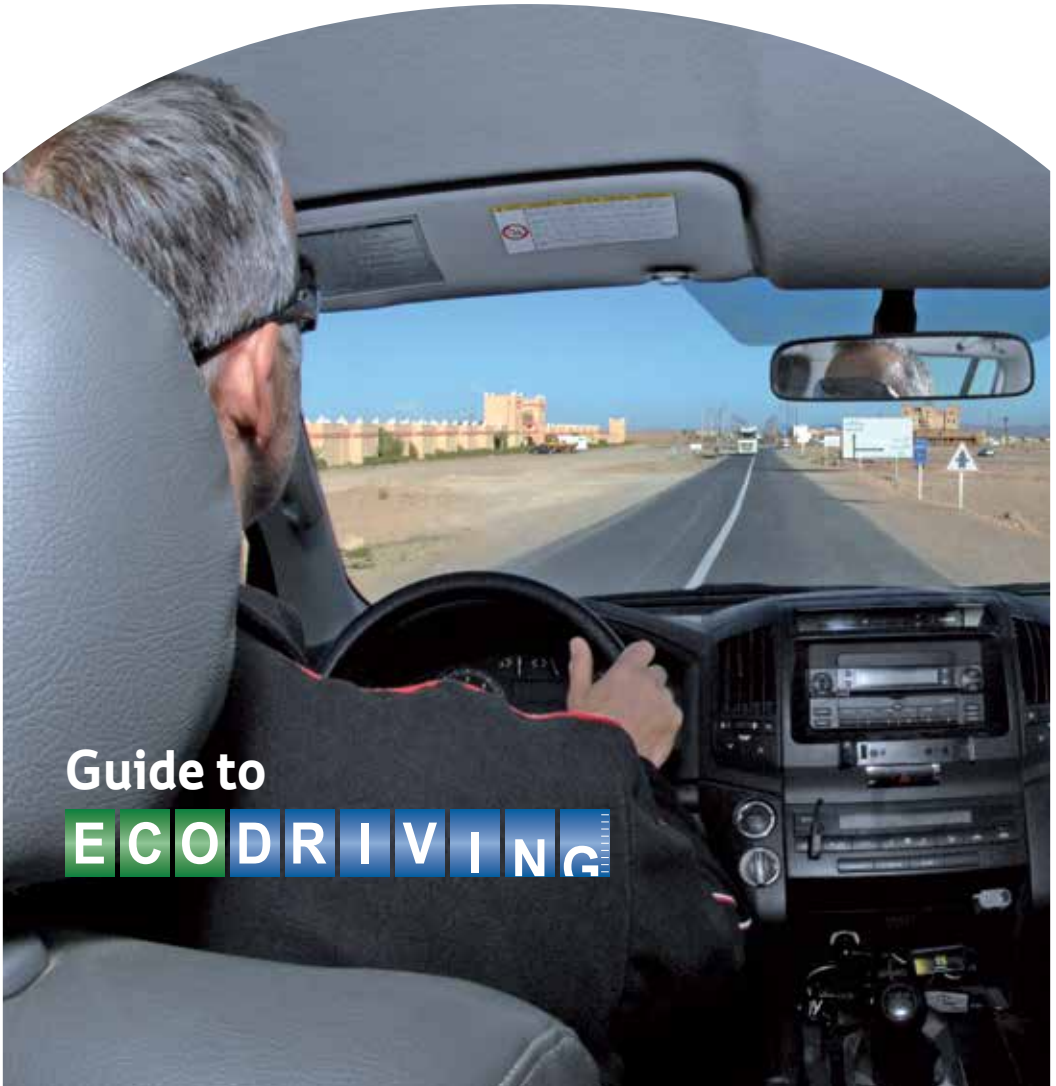

Guide to

ECODRIVING

Toyota Gibraltar Stockholdings Ltd
Tel: +350 200 59100 or +44 207 906 1745
Fax: +350 200 46262 or +44 208 090 3780
E-mail: sales@toyota-gib.com

TGSUSA
Tel: +1 703-442-8550
Cell: +1 703-489-7977
Toll free number: 1-888-869-4427
E-mail: info@toyota-gib.us

Find us on

www.toyota-gib.com



URS is a member of Registrar of Standards (Holding) Ltd.



What is eco-driving?

- **Eco-driving** = Safer - driving with anticipation and in a more careful way.
- **Eco-driving** = Greener - reduced environmental impact with less CO₂ emissions and noise pollution.
- **Eco-driving** = Cheaper - reduced fuel and maintenance cost (15% saving according to IFRC Pakistan pilot).

Eco-driving savings

Open windows

can increase fuel consumption by an average of 5%

Air conditioning

can result in 10-25% extra fuel consumption

Roof load

increases wind drag and therefore consumption:

Roof load (speed of 120 km/h)	Increased consumption
Luggage rack	5-10%
Loaded luggage rack	35-40%

Shifting up gear earlier can result in 8% saving



■ Diesel 1500 - 2000rpm
■ Petrol 2000 - 2500rpm

Low tyre pressure

results in higher fuel consumption (up to 3% extra from 0.5 bar too low). Tyre pressure can fall by 2.5-5% after one month, and by 20% after five months

How to eco-drive

Starting



1

Remove any extra weight and roof load

An extra 50kg can reduce mileage by 2%



2

Plan your route and avoid detours



3

Avoid using your car for short journeys



4

Check your tyre pressure regularly



5

Service your vehicle according to owner's manual

Change oil and air filters as recommended - can improve fuel consumption by 10%

Checking/maintenance

Driving



6

Shift up gear earlier

Reving the engine unnecessarily wastes fuel



7

Only use electrical accessories when necessary (e.g. a/c)

Rule of thumb: under 65km/h open windows, over 65km/h use a/c



8

Follow and anticipate the traffic flow

Avoid unnecessary stopping and starting



9

Keep your window closed (use ventilation system when possible)



10

Switch off your engine if you have to wait longer than 1 minute

up to 1 litre per hour

Find us on www.toyota-gib.com

Images shown are for illustration purposes only. Specifications are subject to change without prior notice.